

Introduction

Aim instruments can measure and record cylinder head temperature using a sensor (thermocouple) positioned under the spark plug. The thermocouple presents a turn in the lower part to make installation and disinstallation easier. All A im thermocouples are **K**-type sensors

All Aim thermocouples are K-type sensors.

Installation notes

The head temperature sensor sits between the spark plug and the cylinder head. To keep the sensor in contact with the cylinder head, it is necessary to remove the washer from the plug when installing the thermocouple.

While running the thermocouple cable along the chassis, be careful to keep it as far as possible from other cables (such as RPM or lap receiver cables) in order to minimize interferences between the cables.

ATTENTION: Before screwing back the spark plug inside the cylinder head, ensure that the sensor is firmly mated with the cylinder head and, when tightening and loosening the spark plug, minimize movement of the sensor. Failure to observe this precaution may result in damage to the sensor

For a correct installation, please watch **Figure 2**:



Figure 2: Cylinder head thermocouple installation

1

Software

Once the thermocouple has been installed, it is necessary to configurate it. In order to correctly configurate the sensor, please use **Race Studio 2**, the software properly developed by Aim to configure your data logger and to analyze stored data.

Race Studio 2

In **Race Studio 2** main window, reported here above, is possible to choose your Aim instrument. Once selected your gauge, please press *"System manager"* button.



Please note: **MyChron 3 Basic** automatically recognizes the sensor and needs no temperature sensor configuration.

Sensor configuration

Once reached "System manager" main window, please press "Channels" button to configure the sensor you have installed on your vehicle. The following screenshot appears.

General	Di	isplay	Channels	514		counts Cu	nomize senso	10	
Logger		hication	Transmit	Receive	Online		Calibrate		
N Channel ider	Enabled/dise	Channel name	Sampling to	Sensor type	Measu	Lower bound	Upper bounc	Param 1	Param 2
1 RPM	Enabled	Engine	10 Hz	Engine revolution speed	Ipm	0.000	20000.000	1.000	25000
2 SPD_1	Enabled	Speed_1	10 Hz	Speed	km/h	0.000	250.000	1666 000	1
3 SPD_2	Disabled	Speed_2	10 Hz	Speed	km/h	0.000	250.000	1666.000	1
4 CH_1	Enabled	Channel_1	10 Hz	K thermocouple	10	0.000	150.000		
5 CH_2	Enabled	Channel_2	10 Hz	K thermocouple	τ	0.000	50.000		
6 CH_3	Enabled	Channel_3	10 Hz	Pressure VDO 0-5 bar	31	0.000	150.000		
7 CH_4	Enabled	Channel_4	10 Hz	Pressure VDO 1-10 bar	T	0.000	500.000		
8 CH_5	Enabled	Channel_5	10 Hz	External vertical accelerom	τ	0.000	150.000		
9 CH_6	Enabled	Channel_6	10 Hz	Zero based optentiometer	°C	0.000	500.000		
10 CH_7	Enabled	Channel_7	10 Hz	Mid zero potentiometer	°C	0.000	150.000		
11 CH_8	Enabled	Channel_8	10 Hz	Lambda sond	T	0.000	500.000		
12 ACC_1	Enabled	Acc_1	10 Hz	Lambda sond NGK TL711	g	-3.000	3.000		
13 ACC_2	Enabled	Acc_2	10 Hz	Longitudinal accelerometer	g	-3.000	3.000		
14 LOG_TMP	Enabled	Datalogger_Temp	10 Hz	Cold joint	ΰ.	0.000	50.000		~
< 11 · · · · · · · · · · · · · · · · · ·		•		• COURT					1
Configuratio	n name	Logger	name	Display name		Available	time :	Total f	equency
htt		EV03 - 8 char	rock - 8 Mb	Mucheon 3		8 53 37	hmal	13	[Hz]

To configure the sensor is necessary to double-click in the box corresponding to "Sensor type" column and to "Ch_x" row (where x represents the channel number where you wish to install the sensor): a menu like the one reported in the previous screenshot appears.

Please, select "K Thermocouple" sensor.

Once selected the correct thermocouple type, is necessary to configure the visualization's lower and upper boundary values.

In order to set these values, please double-click in the row corresponding to the channel where you have installed the thermocouple and in the columns corresponding to lower and upper boundary and fill the boxes with the correct temperature value.

K-type thermocouples do not need to be calibrated.

Transmitting the configuration

Once the sensor has been correctly configured, please transmit the configuration to your gauge pressing "Transmit" button.

During transmission, please do not to switch the gauge off.



Dimensions



Dimensions in millimeters [inches]

Dimensions table – "A"

Applications	Internal Diameter	
Air cooled Kart Air cooled Kart /Bike	12 mm 10 mm	
Connector details		

1	Temperature signal 0-50 mV
2	GND
3	Not connected

Function

Pin

Technical characteristics

Description	Value		
Temperature range Cable length Cable type	From 0° to 300°C [32° to 572°F] 1400 mm [55"] Compensated		

Note 1: CHT thermocouple is supplied with a 1400 mm long compensated cable



3 pins male Binder 712 connectors pinout: solder termination view



Introduzione

Gli strumenti Aim possono misurare e registrare la temperatura della testa del cilindro utilizzando un sensore (termocoppia) posizionato sotto il cavo candela. La termocoppia presenta una curva nella parte bassa per rendere installazione e disinstallazione più facile. Tutte le termocoppie Aim sono **sensori di tipo K**.

Note di installazione

Il sensore viene posizionato tra la candela e la testa del cilindro. Per mantenere il sensore a contatto con la testa del cilindro, è necessario rimuovere la rondella dalla spina quando si installa la termocoppia.

Facendo scorrere il cavo della termocoppia lungo il telaio, fate attenzione a tenerlo il più lontano possibile dagli altri cavi (tipo il cavo RPM o i cavi del ricevitore di giro) per minimizzare le interferenze tra i cavi.

ATTENZIONE: Prima di ri-avvitare il cavo candela nella testa del cilindro, assicurati che il sensore sia saldamente fissato alla testa del cilindro e, quando lo avviti, cerca di ridurre al minimo il movimento del sensore stesso. La non osservanza di questa precauzione può causare il danneggiamento del sensore.

Per una corretta installazione, vedi Figura 2:



Figura 2:Installazione termocoppia sottocandela

1

Software

Quando la termocoppia è stata installata, è necessario configurarla. Per configurare correttamente il sensore, usa **Race Studio 2**, il software appositamente sviluppato da Aim per configurare i suoi strumenti ed analizzarne i dati.

Race Studio 2

Nella finestra principale di **Race Studio 2**, che vedi qui sotto, puoi scegliere il tuo strumento Aim. Una volta selezionato quello corretto premi il tasto "*Gestione Sistema*".



Nota: **MyChron 3 Basic** riconosce automaticamente il sensore; non ha bisogno di configurarlo.

Configurazione Sensore

Nella finestra principale di "*Gestione Sistema*", premi il tasto "Canali" per configurare il sensore che hai installato sul tuo veicolo. Apparirà la seguente schermata.



Per configurare il sensore è necessario fare doppio click sulla cella corrispondente alla colonna "Tipo Sensore" ed alla fila "Ch_x" row (dove x è il numero del canale sul quale vuoi installare il sensore): apparirà il menu a tendina che vedi sopra.

Seleziona il sensore "Termocoppia K".

Una volta selezionato il tipo di termocoppia corretto, è necessario configurare i valori di inizio-scala e fondoscala.

Per farlo fai doppio click sulla fila corrispondente al canale sul quale hai installato la termocoppia e sulla colonna corrispondente ai valori di inizio-scala e fondoscala. Inserisci i valori di temperatura corretti

Le termocoppie di tipo K non necessitano di essere calibrate.

Trasmettere la configurazione

Quando il sensore è stato configurato correttamente, trasmetti la configurazione al tuo strumento premendo il tasto "Trasmissione".

Durante la trasmissione, non spegnere lo strumento.





Dimensioni



Dimensioni in millimetri [pollici]

3

Caratteristiche Tecniche

Descrizione	Valore
Temperatura di funzionamento Lunghezza Cavo Tipo Cavo	Da 0° a 300°C [32° a 572°F] 1400 mm [55"] Compensato

Nota 1: la termocoppia CHT è fornita con un cavo compensato da 1400 mm.

Dimensioni tabella – "A"

Applicazioni	Diametro Interno
Kart raffreddati ad aria	12 mm
Kart/Moto raffreddati ad aria	10 mm

Dettagli Connettore

Pin	Funzione
1	Segnale Temperatura 0-50 mV
2	GND
3	Non connesso



Connettore Binder 712 maschio a 3 pin: vista terminazioni di saldatura